Quick Start Guide

SoMo® 650 Handheld Computer

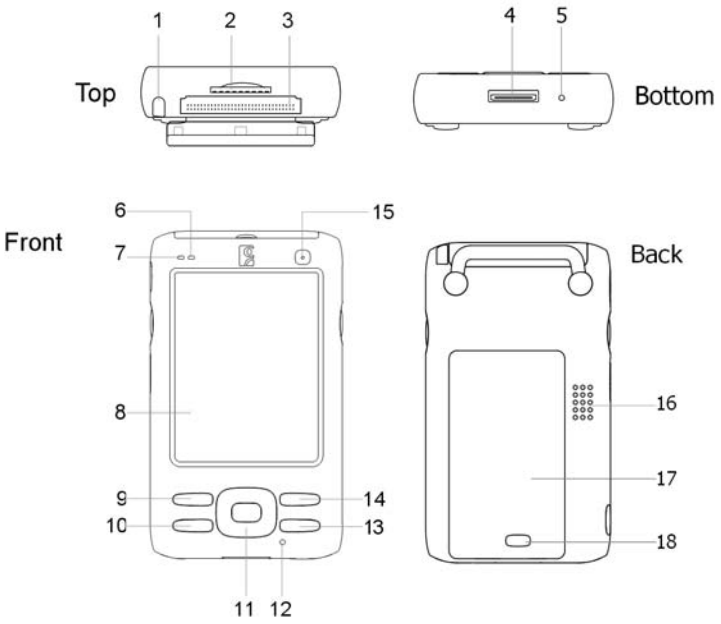

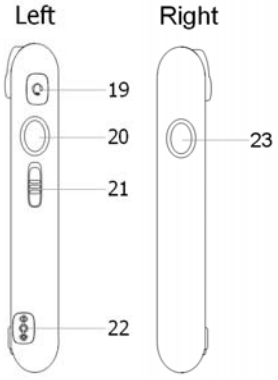

1. Stylus holder, stylus
2. SD (Secure Digital)/SDIO/MMC (Multimedia Card) card slot
3. CF (CompactFlash) card slot
4. Charging/communication port
5. Soft reset button
6. Red/Green LED - alarm, battery
7. Blue/Green LED - *Bluetooth*, Wi-Fi
8. 3.5" TFT LCD touch screen
9. Calendar shortcut button
10. Messaging shortcut button
11. 5-way navigation button
12. Speaker
13. Today screen shortcut button
14. Contacts shortcut button
15. Power button
16. Speaker
17. Battery cover
18. Battery cover release
19. Hands-free (headset/microphone) connector
20. Left programmable application button (default Voice Notes)
21. Hold switch (disables screen and all buttons)
22. DC-in connector
23. Right programmable application button (default radio manager)

© 2007-2009 Socket Mobile, Inc. All rights reserved. Socket, SoMo, the Socket logo Wi-Fi Companion, and Business Mobility Now! are registered trademarks or trademarks of Socket Mobile, Inc. The Bluetooth wordmark is a registered trademark of the Bluetooth SIG, Inc. USA, and any use by Socket Mobile, Inc. is under license. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All other trademarks and trade names contained herein may be those of their respective owners.

Package Contents

- SoMo 650 handheld computer
- Lithium-ion battery
- USB sync/power cable
- AC adapter
- 2 rubber screw caps
- CD with software and documentation
- Sync/charging cradle (650-M only)
- 2.5 mm to 3.5 mm audio headset adapter (650-M only)
- Audio headset with microphone (650-M only)
- Belt carrying case (650-M only)

STEP 1: Install the Battery

1. Remove the battery cover of the SoMo 650. Press the release button on the bottom of the battery cover and use the thumb of your opposite hand to slide the battery cover off the SoMo 650.

2. Place the included battery into the battery compartment, so that the battery's bar code label is face up. Put the battery cover back on.

STEP 2: Charge the Device

1. Connect the AC adapter to the DC-in connector on the left side of the device. Alternatively, you can use the cradle, if included with your version of the SoMo 650.

2. Plug the AC adapter into a suitable wall socket. The SoMo 650 should charge for 4 hours before first use. While charging, the power LED will be red. When charging is complete, it will change to green.

STEP 3: Set up the SoMo 650

1. Slide the hold switch on the left side (#21 in the diagram) up to the unlocked position. ***IMPORTANT! Slide the switch up, or the device will not work!***

2. Turn on the device by pressing the power button above the screen.

3. Follow the onscreen instructions to set up your SoMo 650.

STEP 4: Install Synchronization Software

IMPORTANT! If your host PC runs Windows Vista, do not install ActiveSync from the CD, as described below. Install the Windows Mobile Device Center, available free online: www.microsoft.com/windowsmobile/devicecenter.mspx

If you already have ActiveSync on your host PC, you may need to upgrade to a more recent version, depending on the Windows Mobile version on your SoMo 650.

1. Close any programs running on your computer.

2. Insert the SoMo 650 Getting Started CD into the computer's CD-ROM drive. The welcome page will appear. Click **Next**.

3. Follow the instructions to install Microsoft ActiveSync.

4. After installation, the ActiveSync icon will appear in the lower right corner of your PC.

STEP 5: Connect the SoMo 650 to the Host PC

Connecting with the Sync Cable
Plug the USB sync cable into the connector on the bottom of your SoMo 650. Plug the other end of the USB sync cable into a suitable USB port on your computer. It is recommended that you also connect the AC adapter.

Connecting with the Cradle
Use the USB sync cable to connect the cradle to a host PC. It is recommended that you also connect the AC adapter into the cradle. Insert the SoMo 650 into the cradle.

Cradles are available at: http://www.socketmobile.com/products/

STEP 6: Set up the Synchronization Partnership

For computers running Windows Vista, the Windows Mobile Device Center will appear instead.

1. When you connect the SoMo 650 to the host PC computer for the first time, the New Partnership wizard will automatically appear.

   If the wizard does not automatically appear, open ActiveSync manually by clicking the Start | All Programs | Microsoft ActiveSync.

2. Follow the setup wizard to set up the partnership. Once completed, the first synchronization will start automatically.

3. After the synchronization is complete, you will see that the Calendar, Contacts and Tasks on your SoMo 650 have been updated, depending on your settings.

   The next time you wish to use ActiveSync, simply plug the SoMo 650 into the computer. ActiveSync will then open automatically and update your device.

How Do I Turn on the *Bluetooth* or Wi-Fi Radio?

The SoMo 650DX does not include Bluetooth or Wi-Fi radios.

1. Open the radio manager by pressing the button on the right side of the SoMo 650. Alternatively, tap the Wi-Fi and *Bluetooth* status line in the Today screen (below the date).

2. In the Radio Manager, an "x" appears on the *Bluetooth* or Wi-Fi button if the radio is off. Tap on the button to turn on the radio.

Socket Wi-Fi® Companion™ software automatically launches after Wi-Fi is turned on.

For Windows Mobile 6 Service Pack 4 or later, refer to the User's Guide for instructions on how to install Enhanced Wi-Fi Companion.

SoMo 650 Status Indicator LEDs

LED	LED Behavior	Meaning
Wireless Status LED	Flashing blue	*Bluetooth* radio is on
	Flashing green	Wi-Fi radio is on
	Flashing blue and green	*Bluetooth* and Wi-Fi radios are on
	OFF	Flight mode or device powered off
Battery Status/ Alarm LED	Flashing red	Alarm/Notification, including Low Battery Notification
	OFF	Running on battery power or device powered off
	Solid red light when connected to charger	Charging
	Solid green light when connected to charger	Fully charged

Note: There is no wireless status LED in the SoMo 650DX.

Stylus — You can use the stylus in three ways:

- **Tap an item**: Use to select an option, similar to left-clicking a mouse.
- **Tap and hold an item**: Reveals a submenu, if available. Similar to right-clicking a mouse.
- **Drag**: Hold the stylus against the screen and drag to highlight multiple items, or to move the position of an item. Similar to left-clicking and dragging a computer mouse.

SoMo 650 Models

Configuration	Windows Mobile Version	Region	Language	Part Number
Standard - includes *Bluetooth* and Wi-Fi	5.0 for Pocket PC	North America	English	8560-00001
		EMEA		8560-00002
	6.0 Classic	North America	English	8560-00003
			Spanish	8560-00006
			Brazilian Portuguese	8560-00005
		EMEA	English	8560-00004
			Spanish	8560-00011
			German	8560-00008
			French	8560-00007
			Italian	8560-00009
			Iberian Portuguese	8560-00010
EB – standard configuration with extended battery	5.0 for Pocket PC	North America	English	8560-00017
		EMEA		8560-00018
	6.0 Classic	North America	English	8560-00019
		EMEA		8560-00020
DX - for direct exchange applications (*Bluetooth* & Wi-Fi removed)	5.0 for Pocket PC	Not country specific	English	8560-00012
	6.0 Classic		English	8560-00013
Rx - for healthcare applications (made with antimicrobial plastics)	6.0 Classic	North America	English	8560-00014
		EMEA	English	8560-00015

Product Registration
Socket highly recommends that all customers register their products. Registered users benefit from access to technical support and special offers. Register online at: http://support.socketmobile.com

Additional Documentation
This *Quick Start Guide* covers basic setup for the SoMo 650. For more information, please refer to the *User's Guide*, in the installation CD and at: http://www.socketmobile.com/support/downloads

Online Help
To access general Help files, tap **Start | Help | Contents** for a list of topics. To access Help for a program, open the program and tap **Start | Help**.

Technical Support

- Online Knowledge Base: Search for articles, Frequently Asked Questions or Hot Topics any time, day or night. http://support.socketmobile.com/faq
- Online Requests: Register your product and submit a question. http://support.socketmobile.com/
- By Phone: Contact our Tier 1 Technical Support by calling:
  USA & Canada Toll-free: 800-279-1390
  Direct: +1-510-933-3020

Accessories
For information on accessories for the SoMo 650, please visit:
http://www.socketmobile.com/products/

6430-00282 F
8/2009
Printed in U.S.A.